

Panasonic	Cutting Card	Non cutting card	Note
Panasonic A100	V	X	
Panasonic A102	V	X	
Panasonic A210	V	X	
Panasonic G350	V	X	
Panasonic G400	V	X	
Panasonic G450	V	X	
Panasonic G50	V	V	
Panasonic G500	V	X	
Panasonic G51	V	X	
Panasonic G520	V	X	
Panasonic G60	V	V	
Panasonic G600	V	V	
Panasonic G70	V	X	
Panasonic GD30	V	V	
Panasonic GD35	V	V	
Panasonic GD50	V	X	
Panasonic GD52	V	V	
Panasonic GD55	V	X	
Panasonic GD67	V	V	
Panasonic GD70	V	V	
Panasonic GD75	V	V	
Panasonic GD76	V	X	
Panasonic GD87	V	X	
Panasonic GD90	V	V	
Panasonic GD92	V	V	
Panasonic GD93	V	V	
Panasonic GD95	V	V	
Panasonic GD96	V	V	
Panasonic P341	V	X	
Panasonic VS2	V	X	
Panasonic VS3	V	X	
Panasonic VS6	V	X	
Panasonic VS7	V	X	
Panasonic X100	V	V	
Panasonic X11	V	X	
Panasonic X200	V	V	
Panasonic X300	V	V	
Panasonic X400	V	X	
Panasonic X500	V	X	
Panasonic X60	V	X	
Panasonic X70	V	X	
Panasonic X70-P341i	V	X	
Panasonic X700	V	X	
Panasonic X77	V	X	
Panasonic X800	V	X	
Panasonic X88	V	X	